


### ■ DIMENSIONS

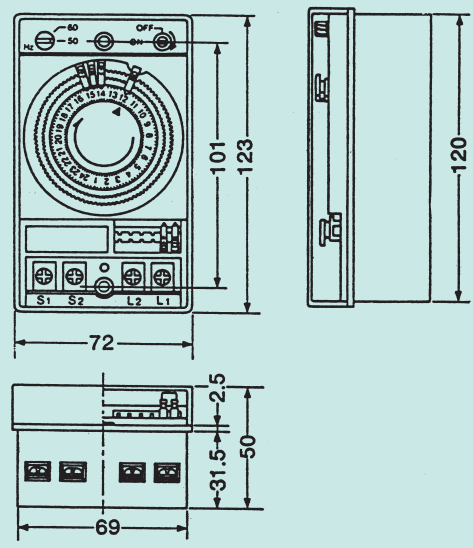

### REMOVING THE COVER


Pull out the cover pressing both side.

### ■ CAUTIONS

- To set the correct time turn the dial in the direction of the arrow (clockwise) and set the Present time.
- Please observe the rated voltage and voltage tolerance of the time switches for adequate use.
- If the load capacity exceeds the rating an electromagnetic switch is required.
- Do not use the time switch where:
  - the ambient temperature goes below -10°C or above +50°C
  - there is much dust
  - there is much moisture
  - outdoors or where it will be exposed to rain or water
  - there is much vibratin
- Do not forget to sat to the correct time in case of tost time due to the suspenaion of electric current.

### ■ WIRING CONNECTION DIAGRAM

When the time switch is used for loads exceeding the rated capacity, it is imperative that the time switch be used in combination with one or more magnetic contactors according to each load.

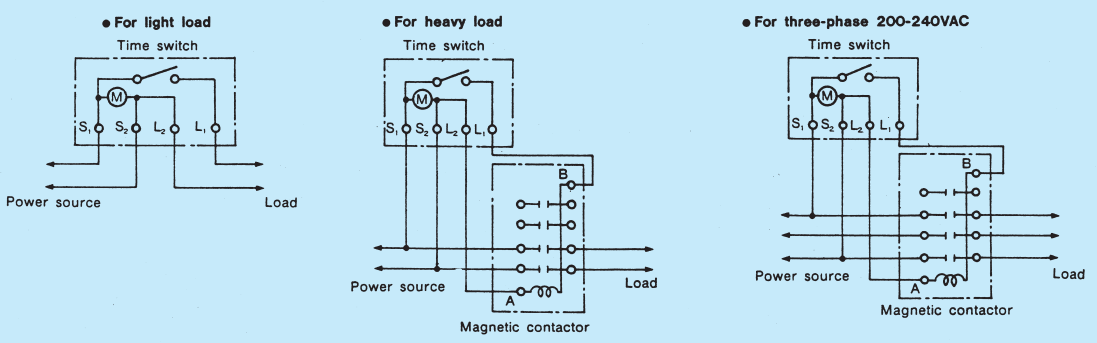

When the time switch is used with a heater, it is imperative that the load circuit be protected by a thermo-switch.